
HIGH TECHNICAL MODEL CAR SERIES

308GTB

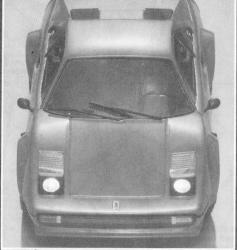





ut burrs and



Some painting instructions are included in this instruction sheet. See picture on the packaging as a reference. (Purchase lacquar or enamel for plastic use.)

Remove burrs on parts using a cutter.

(Be careful not to cut your finger

Bond provided in the Kit may be

used, but purchase liquid bond if beautiful finish is desired. Apply bond to both contact faces.

with the cutter.)



If so desired, head and tail lights may be illuminated. Purchase two or four small lamps. (2.5 to 3V)

Those planning to motorize this model must purchase separately the Mabuchi FA-130 motor and 2UM-3(AA) batteries

Metal


part B

Battery box assembly

Metal

part(A)

Glue the part into the groove.









*Correctly conne

Black lead wire



Tokyo Marui Co., Ltd.

The longer


section is


inside


Be careful not to break the frame of the motor during the installation.

*Press the rear wheels together with the tip of your finger. If it is too tight, loosen the wheels by slightly pulling them apart.



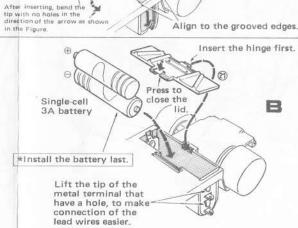


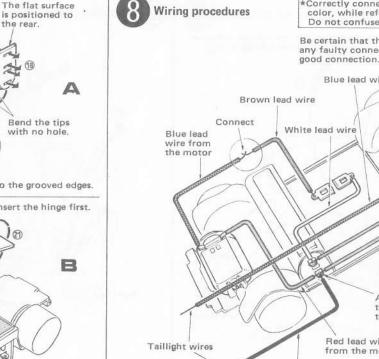


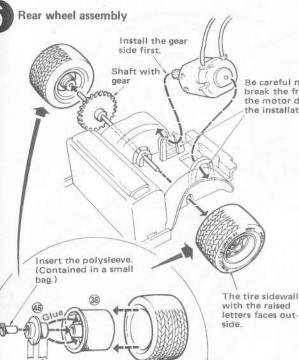


Fit together the 2 pairs


of rear wheel assemblies.

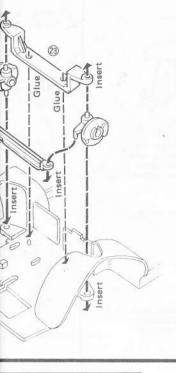

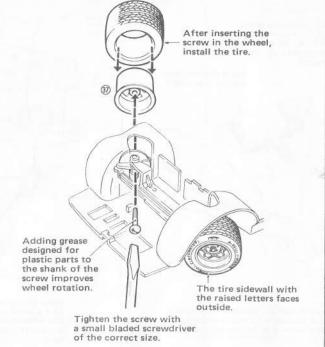

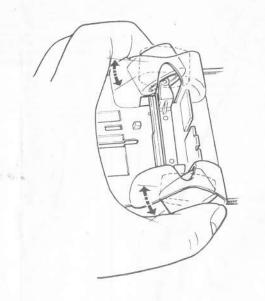


To turn the both front wheels, move the wheels by holding on both tires with your fingers as shown in the Figure.

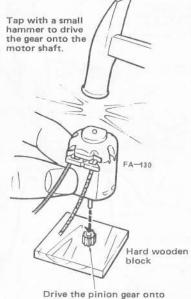


Drive the pinion gear onto the motor shaft until the outer surface of the gear is even with the end of the shaft.


e wires according to their g to the wiring diagram below, colors of the lead wires.


es are firmly secured without s. Soldering will ensure a

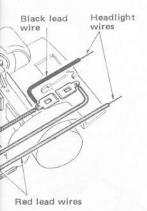



connecting the lead wires to the nals of the battery box, bend the nals down.

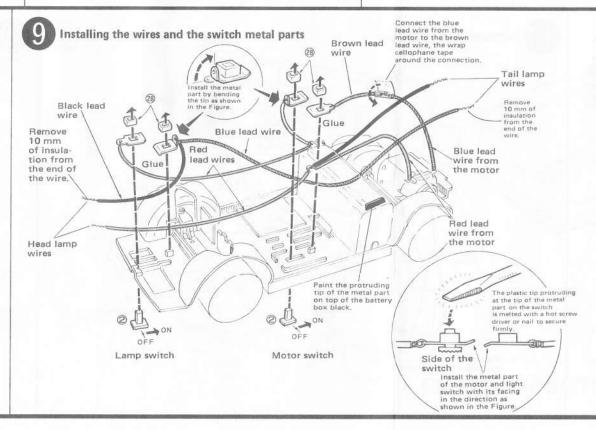

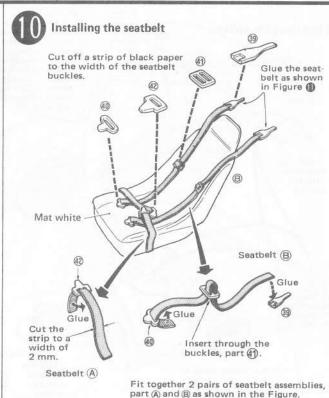

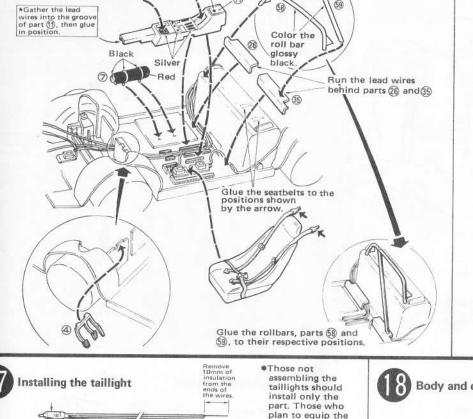

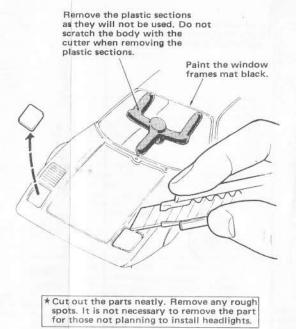

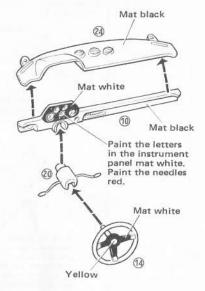

Upho right

> Aft the glue hol

How to make mat white: Mix a small amount of silver into the white paint, then add the flat base material to make the paint

