

INSTRUCTIONS:

SLO2-035



CUT OFF



BORE A HOLE



SAME ON THE OTHER SIDE




REPEAT

1.

4 PISTON CALIPER - REAR

6 PISTON CALIPER - FRONT



20.

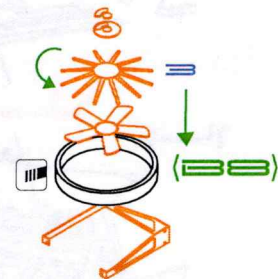



21.




7.

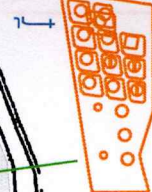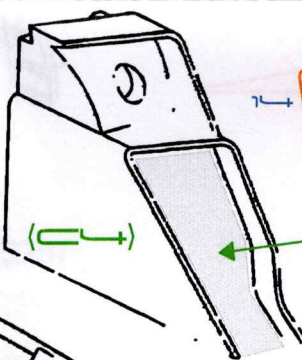

22.

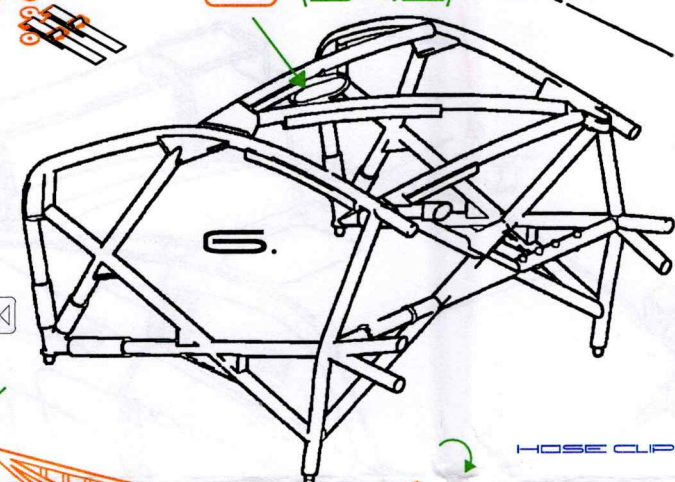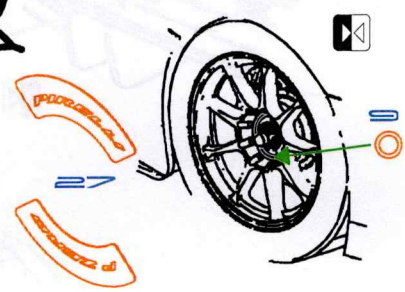


HOSE CLIPS

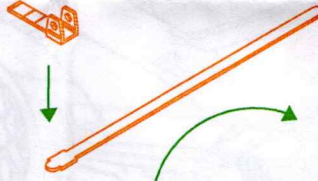



29

INWARDS

30.

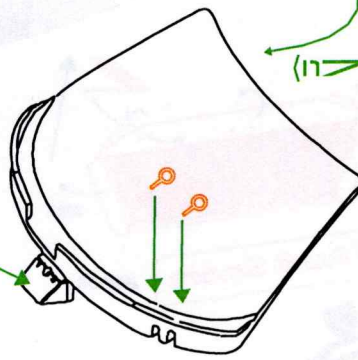

11.

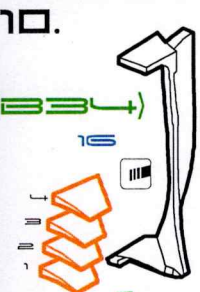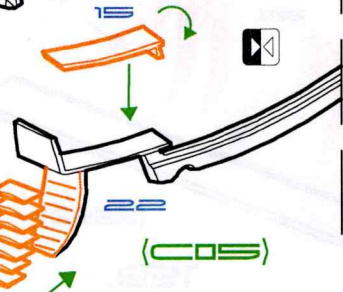

— P/E SHEET — RESIN — LATHE — KIT

12.

13.

14.

15.

16.

17.

18.

19.

